

Science and technology

Home Biology Chemistry Engineering Mathematics Physics

Google+ Twitter YouTube

How to use a pH sensor with Arduino

Posted on March 10, 2017 by dcervantes




pH Sensor with Probe.

Measuring the pH can be very useful if we are developing an aquarium, a hydroponic or an automated aquaponic. Next we will explain how this sensor works, how we should calibrate it and we will put an example of functional code to use it with *Arduino*.

How it works

PH is a measure of acidity or alkalinity of a solution, the pH scale ranges from 0 to 14. The pH indicates the concentration



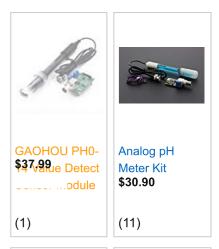



Ads by Amazon

RECENT POSTS

Stopclickbait: change Clickbait headlines to an

This website uses cookies to improve your experience. We'll assume you're ok with this, but you

/ silver chloride) and a glass electrode that is sensitive to hydrogen ion. This is what form the probe. We also have to use an electronic circuit to condition the signal appropriately and we can use this sensor with a micro-controller, such as Arduino.

Here are some examples of everyday substances and their pH:

Substance	pH approximate
Lemon juice	2,4 – 2,6
Cola drink	2,5
Vinegar	2,5 – 2,9
Orange or apple juice	3,5
Beer	4,5
Coffee	5,0
Tea	5,5
Milk	6,5
Water	7,0
Saliva	6,5 – 7,4
Blood	7,38 – 7,42
Seawater	8,0
Soap	9,0 a 10,0
Bleach	13

Specifications

We discuss the specifications of circuit and probe separately since they can be purchased separately and there are variations that must be taken into account depending on the probe used.

Coloring images and video with Machine Learning
How to use a pH sensor with Arduino
How to use Mouse Scroll

Wheel Encoder with Arduino Non-Invasive Current sensor SCT-013-000

ESP8266, the low-cost Wi-Fi chip

How to use Ultrasounds
Module with Arduino
How to use a Water Level
Sensor Module with Arduino
How to use a Soil Moisture
Sensor with Arduino

Search

CATEGORIES

Biology
Chemistry
Engineering
Hardware
Mathematics
Physics
Software

TAGS

74HC245 adafruit Al Android Animation

Arduino Arduino IDE Arduino UNO

Artificial Intelligence

ATmega328 biosensors bulbs DHT11
GitHub Google Google TTS Grow lights

Humidity IP cam kiwix LED

Linux Machine Learning

Non-invasive AC Current Sensors

This website uses cookies to improve your experience. We'll assume you're ok with this, but you can opt-out if you wish. Leer más Aceptar

Electrode Type	pH Range	Temperature (°C)	Zero Point (pH)	Response Time (min)	Noise (mV)	Trinket TTS Ubuntu Video os Wi-Fi Cam wikipedia
65-1	0-14	0-80	7±1	<2		
BX-5	0-14	0-80	7X±11	<2		
E-201	0-14	0-80	7±0.5	<2	<0.5	
E-201-C	0-14	0-80	7X±0.5	<2	<0.5	
95-1	0-14	0-80	7X±0.5	<2	<0.5	
E-900	0-14	0-80	7X±0.5	<2	<0.5	

Circuit Specifications:

The circuit we are using has screen printed *www.auto-crtl.com* and *Logo_PHsensor v1.1* on the bottom layer of the circuit.

Supply Voltage	5 V	
Current	5-10 mA	
Consumption	≤ 0.5 W	
Working Temperature	10-50 °C	
Green LED	Power	
Red LED	Límite de pH	

Pinout

То	Temperature		
Do	Limit pH Signal		
Ро	Analog pH value		
G	Analog GND		

This website uses cookies to improve your experience. We'll assume you're ok with this, but you can opt-out if you wish. Leer más


Aceptar

Calibrate the sensor

As we can see that there are two potentiometers in the circuit. Which it is closer to the *BNC* connector of the probe is the **offset regulation**, the other is the **pH limit**.

- Offset: The average range of the probe oscillates between negative and positive values. The 0 represents a pH of 7.0. In order to be able to use it with Arduino this circuit adds an offset value to the value measured by the probe, so the *ADC* will only have to take samples of positive voltage values. Therefore we will force a pH of 7.0 by disconnecting the probe from the circuit and short-circuiting the inside of the BNC connector with the outside. With a multimeter measure the value of *Po pin* and adjust the potentiometer to be 2.5V.
- **PH Limit**: This potentiometer is to set a limit value of the pH sensor circuit that causes the red *LED* to light up and the *Do pin* signal to turn *ON*.

In addition we have to calculate the voltage conversion that will give us the pH sensor so we will need two pH reference value and measure the voltage returned by the sensor on the *pin Po*. The best thing to do is to use a calibration solution in powders, there are also in liquid but it is easier to preserve the powders. These solutions are sold in different values but the most common are pH 4.01, pH 6.86 and pH 9.18.

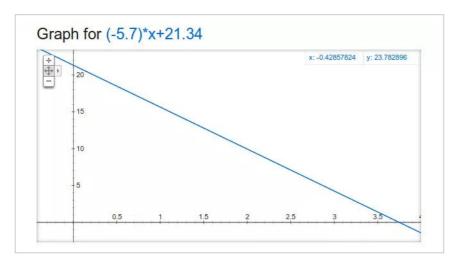

— Graph of the measured voltage and pH equation. y=-5.70 * x + 21.34

Using the powders with *pH 4.01 and pH 6.86* we obtain the voltages on the pin Po *3.04V and 2.54V* respectively. The sensor is linear so by taking two points we can deduce the equation to convert the measured voltage to pH. The general

Connection with Arduino


To connect with Arduino we will need an analog input (**A0**), power (**5V**) and two **GND** that actually in the sensor circuit are separated but we can use the same.

Code

The code consists of *taking 10 samples of the analogue input A0*, ordering them and discarding the highest and the lowest and *calculating the mean* with the six remaining samples by *converting this value to voltage* in the variable *pHVoI*, then using the equation that we have calculated with the pH reference values we convert *pHVoI* to *pHValue* and send it to the serial port to see it in the serial monitor.

```
1
     const int analogInPin = A0;
 2
     int sensorValue = 0;
 3
     unsigned long int avgValue;
 4
     float b;
 5
     int buf[10],temp;
 6
     void setup() {
 7
      Serial.begin(9600);
 8
     }
9
     void loop() {
10
      for(int i=0;i<10;i++)</pre>
11
12
       buf[i]=analogRead(analogInPin);
13
14
       delay(10);
15
      for(int i=0;i<9;i++)</pre>
16
17
18
       for(int j=i+1; j<10; j++)</pre>
19
        if(buf[i]>buf[j])
20
21
         temp=buf[i];
22
23
         buf[i]=buf[j];
24
         buf[j]=temp;
25
        }
       }
26
27
28
      avgValue=0;
      for(int i=2;i<8;i++)</pre>
29
30
      avgValue+=buf[i];
31
      float pHVol=(float)avgValue*5.0/1024/6;
32
      float phValue = -5.70 * pHVol + 21.34;
      Serial.print("sensor = ");
33
34
      Serial.println(phValue);
35
36
      delay(20);
```

This website uses cookies to improve your experience. We'll assume you're ok with this, but you

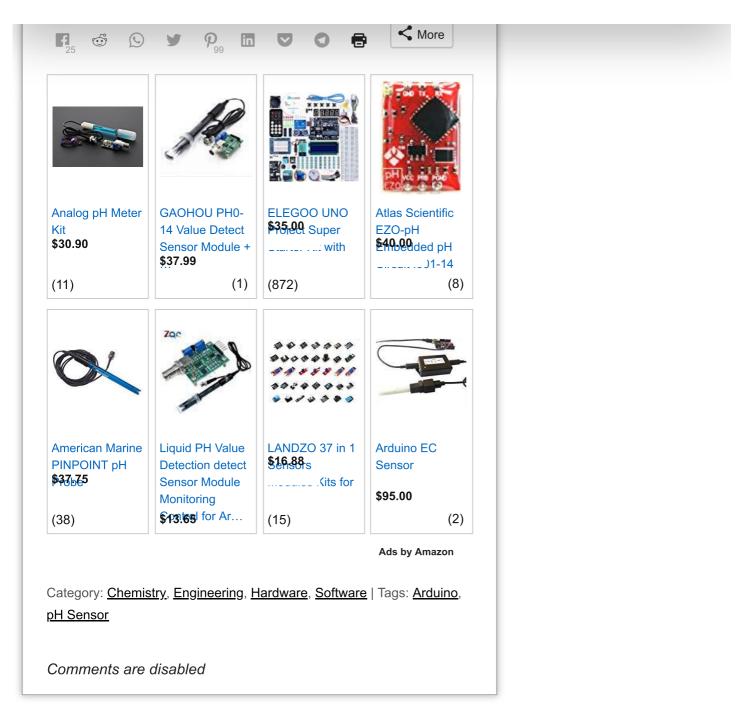

 \leftarrow PREVIOUS NEXT \rightarrow

© 2019 - Scidle

Rundown - Proudly powered by WordPress